



User's Manual
Ematic 9" Portable DVD Player
ED909

Table Of Contents

Safety Precautions	1
Package	3
Main Features	3
Main Unit Controls	4
System Connection	5
The Remote Control	8
Basic operation	10
System Setup	18
Specification	22
Troubleshooting	23

Safety Precautions

Thank you for choosing our portable DVD player. It includes a 9" display and built-in DVD player. This unit is designed for use at home or on the go. Please read the manual carefully prior to use and keep it for future reference.



Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use this unit near water. Do not place the unit over any container with liquid inside.
- 3) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 4) Unplug this unit during lightning storms or when unused for long periods of time.
- 5) Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 6) Only use accessories specified by the manufacturer.
- 7) Refer all servicing to qualified service personnel when the unit has been damaged, such as damaged power supply cords or plugs, spilt liquid in the device, exposure to moisture, or if the device is not operating normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
- 8) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause to the unit malfunction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- .. Reorient or relocate the receiving antenna.
- .. Increase the separation between the equipment and receiver.
- .. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- .. Consult the dealer or an experienced radio/TV technician for help.

 
Package

DVD Player	1
9" LCD Monitor	1
Remote Control with battery	1
AC/DC Power Adapter	1
Cigarette Lighter Adapter	1
DC+Audio/Video Cable	1
User Manual	1
Car belts	2

Main Features


- High brightness color 9" LCD screen
- Compatible with discs DVD, VCD, MP3, MPEG4, CD, JPEG, etc
- Built-in stereo speaker
- Supports PAL or NTSC system
- Supports Multi-language OSD, speed forward/backward, repeat function
- Zoom in/out function

Main Unit Controls

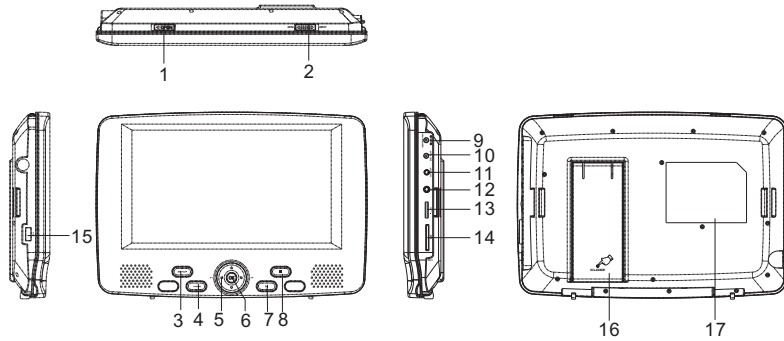

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Open knob 2. Power ON/OFF switch 3. SETUP button 4. MODE button 5. ▲(◀)/▼(▶)/◀(◀)/▶(▶) 6. OK button 7. PLAY/PAUSE button 8. STOP button 9. DC IN 9-12V | <ol style="list-style-type: none"> 10. DC OUT 11. AV OUT 12. Earphone jack 13. Volume knob 14. SD card slot 15. USB Port 16. Bracket 17. Rating label position |
|---|--|

 Monitor View

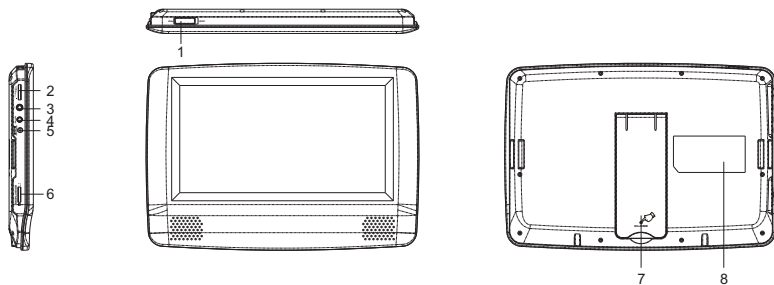


- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Power ON/OFF 2. Volume knob 3. Earphone jack 4. AV IN | <ol style="list-style-type: none"> 5. DC IN 9-12V 6. Brightness knob 7. Bracket 8. Rating label position |
|---|--|


System Connection

Powering and installation

 Plug one end of the AC/DC power adaptor into the DC IN 9-12V jack on the right of the unit, then plug the other end into the AC power receptacle. Please refer to the following illustration.

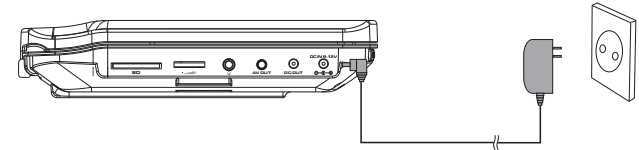

 
If using car cigarette lighter adaptor to connect to the power: Plug one end of the cigarette lighter adaptor into the DC IN 9-12V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

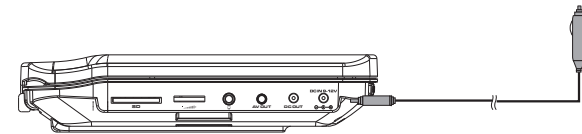

- Note:
1. Car cigarette lighter adaptor is not recommended to recharge the battery.
 2. Car cigarette lighter adaptor can only be used when the car power supply is 9-12V.
 3. The main plug is used as the disconnect device, the disconnect device should remain readily operable.

Connecting to monitor

 
The unit can also be connected to the external LCD monitor.
Connect the unit to power by AC/DC adapter or cigarette lighter adapter.
Then connect the unit DC OUT jack to DC IN 9-12V Jack of the LCD Monitor by a DC/AV cable.
Also use this DC/AV cable to connect the AV OUT jack of the unit to AV IN jack of the Monitor.
Please refer to the illustration below.

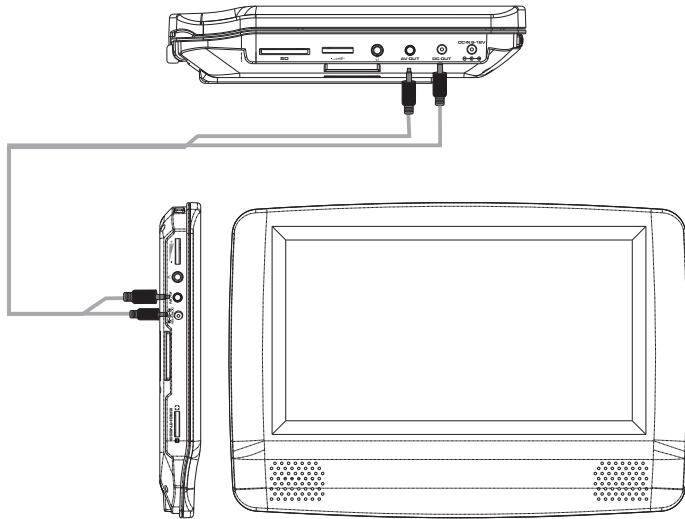

Note:
You're advised to supply both units power only by using the cigarette adapter. The AC/DC adapter is used to supply power to only one unit. The charger is used to charge the main unit.


Connecting with external speaker

 The unit can be connected to external speakers. Please see the following illustration.

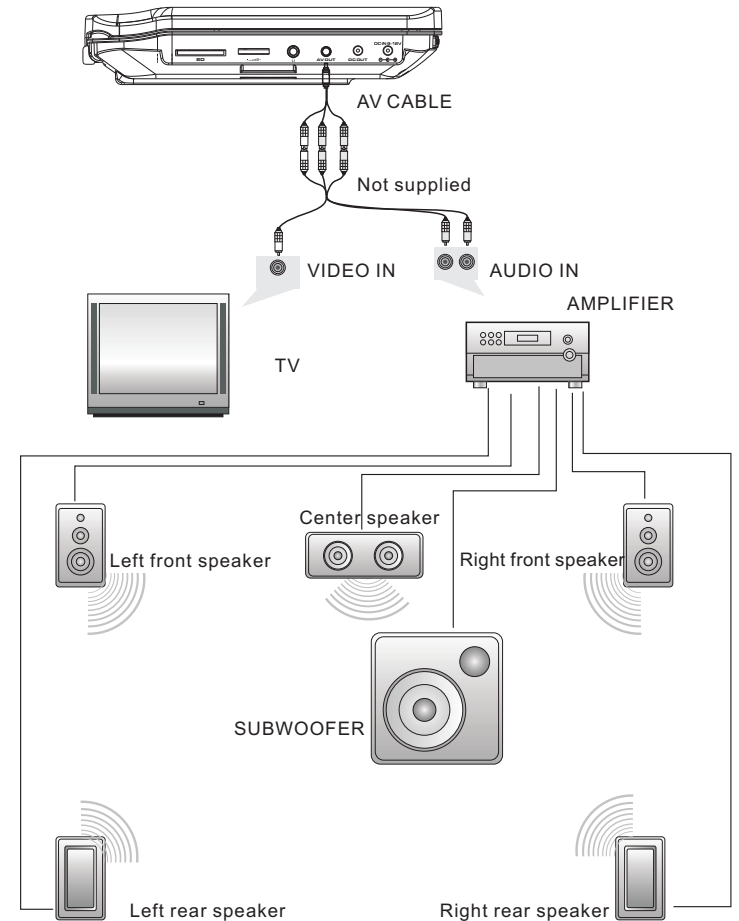

Note:
5.1 channel will only be available after connecting to AMP.

 
The Remote Control

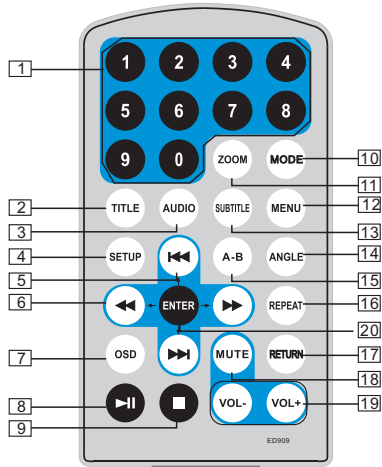


- | | |
|---|--|
| 1. Number button | 11. ZOOM (To zoom in/out the image during the playback) |
| 2. TITLE (To display title information) | 12. MENU (To enter or exit root menu) |
| 3. AUDIO (To select audio language) | 13. SUBTITLE (To select subtitle language when playing DVD disc) |
| 4. SETUP (To go to or exit setup menu) | 14. ANGLE (To change viewing angle when playing disc with multi-angle) |
| 5. ⏮ ⏭ Previous/Next button (To go to previous/next chapter or scene during playing) | 15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing) |
| 6. ⏪ ⏩ Fast forward/backward button (To scan forward/backward at 2, 4, 8, 16, or 32 times) | 16. REPEAT (To repeat playing title, chapter or track) |
| 7. OSD (To display disc information during playing such as elapsed and remaining time) | 17. RETURN (To return to the main menu) |
| 8. ▶⏪ PLAY/PAUSE | 18. MUTE (To mute the volume) |
| 9. ■ STOP (press once to stop playback, then press ▶⏪ to resume playback from the point where you stopped; press stop button twice to stop playback completely) | 19. VOL +/- (To adjust the volume) |
| 10. MODE (To select the source) | 20. ENTER (To confirm) |

The Use of Remote Control

 Please put the battery into the remote control as shown below.

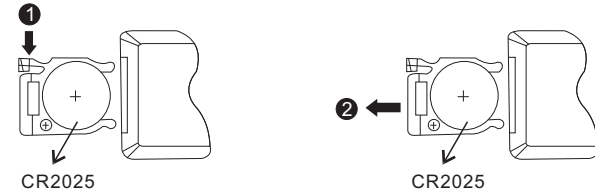

 When using remote control, make sure the infrared window is pointed to infrared receiving window of the machine. The distance between machine and remote control must be within 3 metres. Please refer to the following illustration.

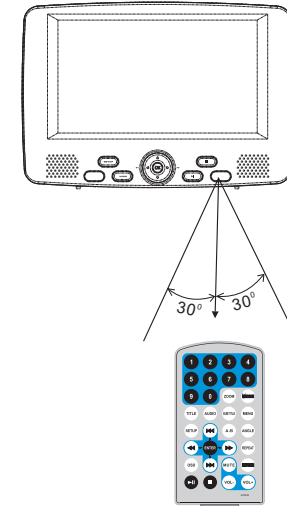

Note:

 
1. To avoid malfunction, DO NOT place the device near a damp environment.
2. Do not expose the infrared receiving window to direct sunlight.
3. Replace with a new battery if the remote control isn't working properly.

Basic Operation




Playing disc of DVD, MPEG4, SVCD, VCD, CD, MP3.

1. In the Source Mode, you can press "◀▶" to select and "ENTER" key to enter the source you want.

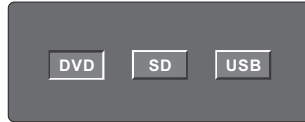

2. Open the disc door and insert a disc into the door with the labelside facing up.
3. Close the disc door. The unit will load the disc and start playing.
4. Press "■" once to stop playback; press "▶||" to resume playback from the point where you stopped; press "■" twice to stop playback completely.
5. During playback, press "▶||" to pause; press it again to resume playback.
6. When the playing is finished, please turn off the power by sliding ON/OFF switch to OFF.
7. For some DVD disc with Title or Chapter menu, press "MENU" button to enter menu page, and use "◀▶◀▶◀▶" to select. Press ENTER to confirm.

 Note:
Please do not disconnect USB devices or remove SD/MMC cards while they are in use. Functional failure may occur if removed incorrectly.

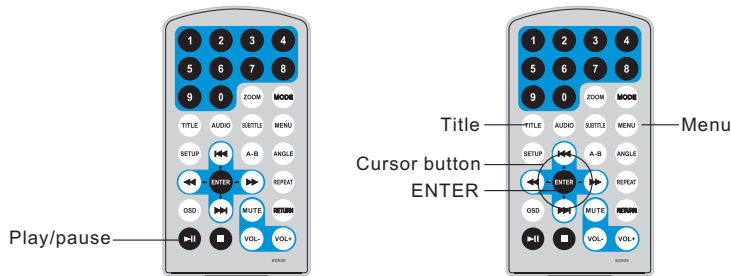


Fast forward and fast backward





When playing disc of DVD, MPEG4, SVCD, VCD, CD, the machine can search forward or backward.

 1. Press "▶▶", the unit will search forward. Press it repeatedly, the machine will play at 2, 4, 8, 16, 32 times of speed.

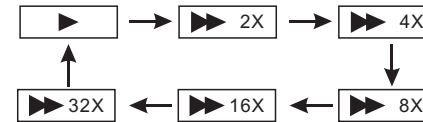

  2. Press "◀◀", the unit will search backward. Press it repeatedly, the machine will play at 2, 4, 8, 16, 32 times of speed.

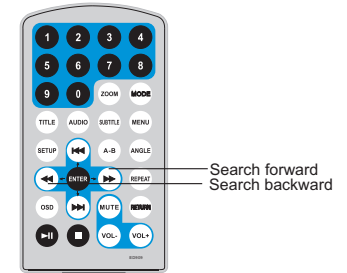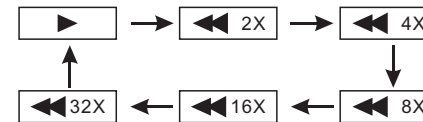


Repeat playing



When playing disc of DVD, MPEG4, SVCD, VCD, CD, MP3 user can repeat playing one chapter, title or the whole disc.

 For DVD disc, press "repeat" button to repeat playing one Chapter; press it again to repeat playing Title; press it the third time to repeat playing the whole disc.



For MP3 disc, press "repeat" button to repeat playing present file; press it again to repeat playing the folder; press it the third time to cancel repeat function.



For CD/VCD disc, press "repeat" button repeatedly to repeat the track and the whole disc.

 


Repeat playing of favorite scene




When playing disc of DVD, MPEG4, SVCD, VCD, CD, MP3, user can repeatedly play a specific section.

During playback, press "A-B" button at a point A, then press this button again in point B, the unit will automatically repeat playing the part between "A-B"

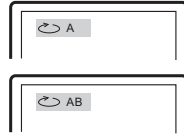

 Press it the third time, the unit will return to normal playback.

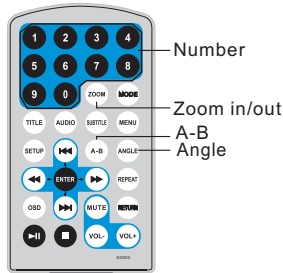

Angle



While playing DVD disc with multi-angle, press "Angle" button to change the display angle.

Note:

 
The function is available only for discs with multi-angle.

Zoom in/ out



When playing disc of DVD, MPEG4, SVCD, VCD user can zoom in or zoom out the image.

During playback, press "Zoom" button, the image will be enlarged; press it again the image will be enlarged again; press it fourth time, the image will zoom out, press it repeatedly and the image will return to normal status.

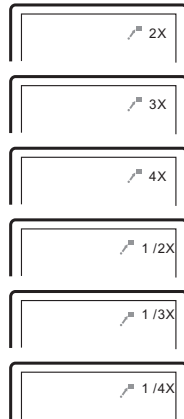

When the image is enlarged, user can press "◀/▶/◀/▶" to move the image.

Playing JPEG file in data disc

 
1. Place a JPEG disc into the tray, the unit will start reading and play.
2. Press "◀▶" to select a JPEG file and press "ENTER" button to confirm.
Note: you can press "MENU" to return to the folder list. Press "▶" or "ENTER" to preview the file selected.
3. To rotate the picture counter-clockwise, press "◀◀"; Press "▶▶" to rotate the picture clockwise.
4. Press "OSD" button when viewing pictures, you can select different refresh modes as follows:

1. from top to bottom
2. from bottom to top
3. from left side to right side
4. from right side to left side
5. from left top to right bottom
6. from right top to left bottom
7. from left bottom to right top
8. from right bottom to left top
9. from horizontal center to both sides
10. from vertical center to both sides
11. from top and bottom to center
12. from right and left to center
13. from four window's top side to bottom side
14. from four window's left side to right side
15. from 4 edges to center


5. During viewing files, "⊙" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
6. When viewing JPEG files, press "■", pictures will be displayed in thumbnail mode, press "◀▶◀▶" or "ENTER" button to select one picture to view.

Playing MP3 files in data disc

1. Place MP3 disc into the disc door. Press "◀▶" or "ENTER" button to choose an MP3 file; Press "▶" or "ENTER" button to play the file selected.

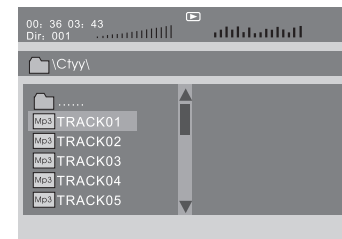

SD/MMC/USB main menu

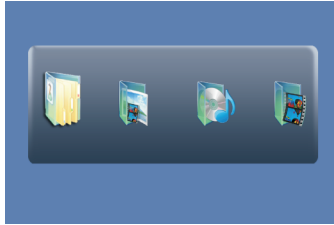 

After entering the SD/MMC or USB, the system will show Main Menu which includes 4 Function ICONS. You can select them by "◀▶" and press "ENTER" key to confirm.



Browser Mode
Please refer to P15 for detail explanation



Photo Mode
Please refer to P15 -16 for detail explanation



 
Music Mode
Please refer to P16 for detail explanation



Movie Mode
Please refer to P17 for detail explanation

Note: Media cards formatted in exFAT file system are not supported.

Browser mode

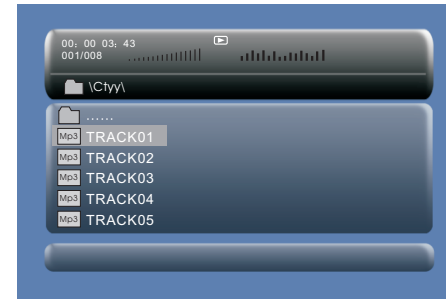

In the Browser Mode, the system will show the list of files and folders.
"◀▶", "ENTER" key: select and play
"▶▶": Enter the folder
"◀◀": Quit the folder

Note:

If you want to return to the Main Menu, please make sure the system is in list of file or folder status, then press "RETURN" KEY.

Photo mode



In the Photo Mode, the System will show the thumbnail Mode first.
"◀▶", "▶▶", "◀◀", "▶▶", "ENTER": select and play.
Slide Show: play the JPEG.
Menu: Enter the Help Menu.
Prev: Page Up.
Next: Page Down.

When playing JPEG:

1. To rotate the picture counter-clockwise, press "◀"; Press "▶" to rotate the picture clockwise
2. Press OSD button when viewing pictures, you can select different refresh modes as follows:
 1. from top to bottom
 2. from bottom to top
 3. from left side to right side
 4. from right side to left side
 5. from left top to right bottom
 6. from right bottom to left top
 7. from left bottom to right top
 8. from right bottom to left top
 9. from horizontal center to both sides
 10. from vertical center to both sides
 11. from top and bottom to center
 12. from right and left to center
 13. from four window's top side to bottom side
 14. from four window's left side to right side
 15. from 4 edges to center
3. During viewing files, "⊙" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
4. When viewing JPEG files, press "■" and "RETURN" key, pictures will be displayed in thumbnail mode, press "◀▶" or "ENTER" button to select one picture to view.

Note :

If you want to return the Main Menu, please press "RETURN" key in the thumbnail mode.

Music mode



In the Music Mode, the system will show the list of music files, like MP3 and so on.

Press "◀▶", "ENTER", select and play.

Press "◀▶" to fast forward/backward MP3 during playing.

Press "◀▶" to select the function button when in "stop" status.

 
Page-: Page Up.

▶: play

Page+: Page Down

Note: Press "Return" Key to Return to the Main Menu.

Movie mode

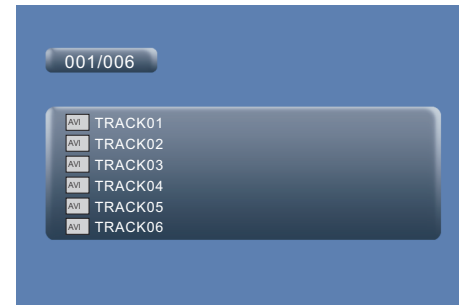

In the Movie Mode, the system will show the list of Movie files, like AVI and so on. "◀▶", "▶▶", "ENTER" Key: Select and Play.


When playing movies you can press "MENU" and "Return" Key to return to the list of movies. Press "Return" key to return to the Main Menu.

CD RIPPING

While playing the CD/HDCD disc, you can enter CD Ripping function. By pressing subtitle button, DVD player will be able to change the CD format into MP3 format, and then store it in the USB or SD card.

CD RIP			
Options		Track	
Speed	Normal	Track 01	03:36
Bitrate	128kbps	Track 02	03:36
Create Id3	Yes	Track 03	03:36
Device	USB 1	Track 04	03:36
		Track 05	03:36
		Track 06	03:36
		Track 07	03:36
SUMMARY			
Selected Track	0		
Selected Time	00:00		
Start	Exit	All	None

 Speed: In this item, you can set the rip speed: Normal or Fast.
Bitrate: In this item, you can set the bitrate. It has 6 choices, 128Kbps, 192Kbps, 256Kbps, 320Kbps, 96Kbps and 112Kbps.
Create ID3: In this item, you can create ID3 when playing CD text.
Device: This item indicates whether USB or SD CARD is connected with DVD player.
Exit: Exit to the previous menu.
All: Select all the files in the disc for conversion and storage.
None: Cancel the selection.
Start: Move the cursor to the item and press "ENTER" button, the conversion begins. While converting, you can select "CANCEL" to stop it.

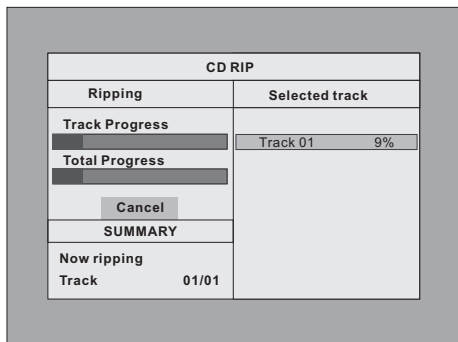




System Setup

	<p>Press "Setup" button, the main menu will be displayed on the screen In the main Page, Press "◀◀ ▶▶" button to highlight the item. Press "ENTER" button to access. Press Setup button to exit.</p>
--	---


General Setup Page





	<p>TV display: Enter this option, user can set screen display format (Normal/PS, Normal/LB, Wide) The default is "Wide" Note: ☆ The function depends on the display ratio with which the DVD disc is recorded. ☆ Please choose "Wide(16:9)" when using a 16:9 wide screen TV set.</p>
	<p>Angle Mark: Enter this option to set the angle during playback. Optional setting: ON, OFF The default is: ON</p>
	<p>OSD Language: In the option user can set OSD menu language (English, French, Spanish, Portuguese). The default is English.</p>
	<p>Screen Saver: Enter this option to set whether to activate the screen saver function. The default is ON.</p>

   Video Setup Page

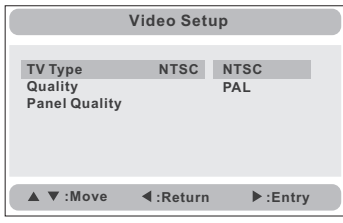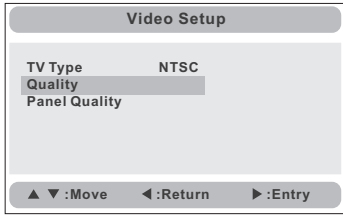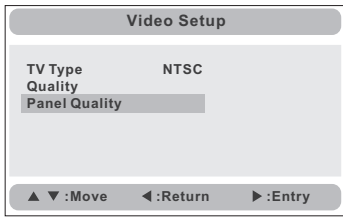 <p>The screenshot shows the 'Video Setup' menu with 'TV Type' set to 'NTSC', 'Quality' set to 'PAL', and 'Panel Quality' highlighted. Navigation buttons are at the bottom.</p>	<p>TV Type: Enter this option to select TV type (PAL, NTSC) The default is NTSC.</p>
 <p>The screenshot shows the 'Video Setup' menu with 'Quality' highlighted. 'TV Type' is 'NTSC' and 'Panel Quality' is visible.</p>	<p>Set the Video Quality of AV OUT</p>
 <p>The screenshot shows the 'Video Setup' menu with 'Panel Quality' highlighted. 'TV Type' is 'NTSC' and 'Quality' is visible.</p>	<p>Set the Video Quality of PANEL</p>

 Preference Page

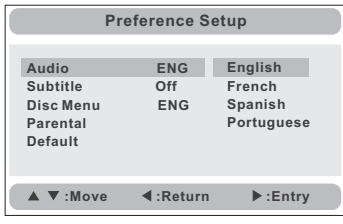 <p>The screenshot shows the 'Preference Setup' menu with 'Audio' set to 'ENG' and 'English' highlighted. Other options include Subtitle (Off), Disc Menu (ENG), Parental, and Default.</p>	<p>Audio: Enter this option, user can select preferred audio language for DVDs. The default is English. Note: ☆ The audio language depends on the material on each disc. ☆ User can also change the audio language during playback by pressing the Audio button.</p>
--	---

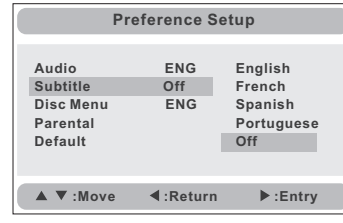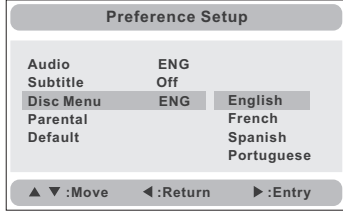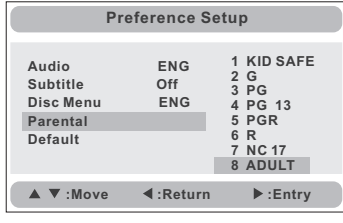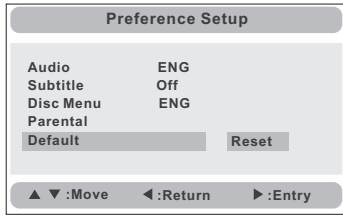     <p>The screenshot shows the 'Preference Setup' menu with 'Subtitle' set to 'Off' and 'French' highlighted. Other options include Audio (ENG), Disc Menu (ENG), Parental, and Default.</p>	<p>Subtitle: Select your preferred language to show the subtitles on the screen. The default is OFF The subtitle languages depend on the information available on each disc. You can also change the subtitle language during playback by pressing the SUBTITLE button.</p>
 <p>The screenshot shows the 'Preference Setup' menu with 'Disc Menu' set to 'ENG' and 'English' highlighted. Other options include Audio (ENG), Subtitle (Off), Parental, and Default.</p>	<p>Disc Menu: This function allows you to choose the menu language stored on the disc. The default is English. Note: the disc menu languages depend on the information available on the disc.</p>
 <p>The screenshot shows the 'Preference Setup' menu with 'Parental' set to '5 PGR' and '5 PGR' highlighted. Other options include Audio (ENG), Subtitle (Off), Disc Menu (ENG), and Default.</p>	<p>Parental: Enter this option to set the parental control level to block unsuitable scenes for children. Optional parental control levels: KID SAFE, G, PG, PG 13, PGR, R, Nc17, ADULT. The default is ADULT. The default password is 8888.</p>
 <p>The screenshot shows the 'Preference Setup' menu with 'Default' highlighted and a 'Reset' button next to it. Other options include Audio (ENG), Subtitle (Off), and Disc Menu (ENG).</p>	<p>Default: Select this item and press "ENTER" button to reset.</p>

 
Specification

Compatible disc: DVD/VCD/CD/MP3/MPEG4
 Signal system: PAL/NTSC
 Panel size: 9 inch
 Frequency response: 20Hz to 20kHz
 Video output: 1Vp-p/75Ohm, unbalanced
 Audio output: 1.4Vrms/10kOhm
 Audio S/N: Better than 80dB
 Dynamic range: Better than 85dB
 Laser: Semiconductor Laser, Wave Length: 650nm/795nm
 Power source: DC 9-12V
 Power consumption: 10W
 Operating temperature: 0~40°C
 Weight(Monitor/DVD Player): 0.52 / 0.93kg
 Dimensions (Monitor/DVD Player)(W x D x H): 270x185x24/270x186x40 mm
 Battery Type: Li Polymer

Note:

1. The quality and speed for reading JPEG photos depend on the resolution and compression ratio of the photos. Some JPEG photos may not be played due to the disc quality and the formats.
2. Some DVD+R/RW, DVD-R/RW, CD-R/RW discs may not be played due to the quality on burning conditions.

Troubleshooting

PROBLEM	SOLUTION
No sound or distorted sound	Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range.
Picture is distorted	The disc might be damaged. Try another disc; it is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	Some discs have sections that prohibit rapid scanning or chapter skip; If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic equipment Directive)

Due to continuous improvement of the unit, no prior notice will be given regarding changes on above features and specifications.